

		0	1	2	3	4	5	6	7	12	13	14	
		Periodical tracking	Ignition ON/OFF	Idle IN	over speed	over RPM	Idle OUT	journey State	Idling state	Tow away state	external battery low	DTC_MIL	DTC number
8	GPS_SPEED	A	0	0	0	0	0	0	0	0	0	0	0
9	GPS_DIR	0	0	0	0	0	0	0	0	0	0	0	0
14	DIO_IGNITION		0					0					
24	ODO_FULL			0			0	1					
40	GPS_PDOP	0	0	0	0	0	0	0	0	0	0	0	0
127	EVENT			0			0						
150	MDI_EXT_BATT_LOW							1			0		
151	MDI_EXT_BATT_VOLTAGE			0			0	1			0		
154	MDI_DTC_MIL			0			0	1				0	0
155	MDI_DTC_NUMBER			0			0	1				0	0
156	MDI_DTC_LIST			0			0	1				0	0
157	MDI_RPM_MAX					0							
158	MDI_RPM_MIN					0							
159	MDI_RPM_AVERAGE					0							
160	MDI_RPM_OVER					0							
168	ODO_FULL_METER			0			0	1					
230	MDI_PENDING_DTC_LIST											0	0
231	MDI_MAX_RPM_IN_LAST_OVER_RPM					0							
232	MDI_OBD_MILEAGE_METERS			0			0	0					
233	MDI_IDLE_STATE								0				
234	MDI_VEHICLE_STATE							0	0	0			
235	MDI_OBD_SPEED	B		0									
236	MDI_OBD_RPM					0							
237	MDI_OBD_FUEL			0			0	1					
238	MDI_OBD_VIN							1					
239	MDI_OBD_MILEAGE			0			0	1					
240	MDI_JOURNEY_TIME							2					
241	MDI_IDLE_JOURNEY							2					
242	MDI_DRIVING_JOURNEY							2					
243	MDI_MAX_SPEED_IN_LAST_OVERSPEED				0								
244	MDI_OVERSPEED_COUNTER				0			1					
246	MDI_ODO_JOURNEY							2					
247	MDI_OVERSPEED				0								
248	MDI_MAX_SPEED_JOURNEY							2					
249	MDI_JOURNEY_STATE							0					
	ACTIVATED BY DEFAULT	YES	NO	YES	YES	NO	YES	YES	YES	NO	YES	YES	YES

- 0 Mandatory (not configurable by the customer)
- 1 Activated by default (configurable via the DM)
- 2 Not activated by default (configurable via the DM)
- A/B User chooses between OBD or GPS speed (A by default)